


The Correct Method of Bleeding Air from a BG100 Grease Gun

- 1) Pull the follower rod out until the rod groove can be pulled into the barrel slot.
 - 2) Remove the grease gun barrel from the BG100 gun head.
 - 3) Select the correct follower position depending on whether you will be using a cartridge or bulk filling your grease gun.
 - 4) Remove the large cap from the grease cartridge, then insert the open end of cartridge into the gun barrel.
 - 5) Remove the small top cap from the cartridge and screw the gun barrel to the grease gun head.
 - 6) Unlock the follower rod from the barrel.
 - 7) Turn the rod to lock it into the follower.
- Note: The rod is locked when the rod cannot be pushed into the grease gun barrel.
- 8) Apply light pressure on the pull handle as pictured, at the same time press the trigger on the gun until grease appears out of coupler. This procedure may need to be carried out 2 or 3 times to remove all air from the system.
 - 9) Turn and unlock the rod from the follower, then push the rod into the barrel
 - 10) Your grease gun is now ready for use.

Grease	Follower Position
BULK	
CART- RIDGE	